

Axpert King 3K User Manual

Table Of Contents

ABOUT THIS MANUAL	1
Purpose	1
Scope	1
SAFETY INSTRUCTIONS	
INTRODUCTION	2
Features	
Basic System Architecture	
Product Overview	3
INSTALLATION	4
Unpacking and Inspection	4
Preparation	
Mounting the Unit	4
Battery Connection	5
AC Input/Output Connection	6
PV Connection	8
Final Assembly	8
Remote Display Panel Installation	9
Communication Connection	
Dry Contact Signal	10
BMS Communication	10
OPERATION	11
Power ON/OFF	
Operation and Display Panel	
LCD Display Icons	
LCD Setting	
Display Setting	
Operating Mode Description	
Fault Reference Code	
Warning Indicator	
Battery Equalization	
SPECIFICATIONS	35
Table 1 Line Mode Specifications	
Table 2 Battery Mode Specifications	
Table 3 Charge Mode Specifications	
Table 4 ECO/Bypass Mode Specifications	
TROUBLE SHOOTING	
PARALLEL FUNCTION	
Appendix A: Approximate Back-up Time Table	-
Appendix B: BMS Communication Installation	
Appendix C: The Wi-Fi Operation Guide in Remote Panel	61



ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- 1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
- 2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
- 3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
- 4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- 5. CAUTION Only qualified personnel can install this device with battery.
- 6. **NEVER** charge a frozen battery.
- 7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
- 8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
- 9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
- 10. Fuses are provided as over-current protection for the battery supply.
- 11. GROUNDING INSTRUCTIONS -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- 12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
- 13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.



INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, MPPT solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

Features


- Pure sine wave inverter
- Built-in MPPT solar charge controller
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function
- Zero-transfer Time

Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:


- Generator or Utility.
- PV modules

Consult with your system integrator for other possible system architectures depending on your requirements. This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

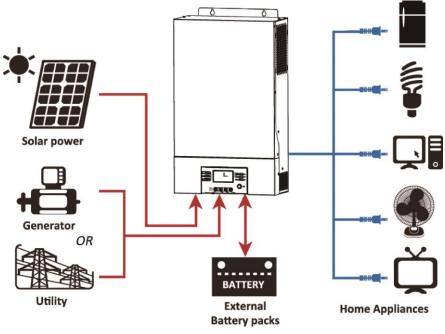



Product Overview

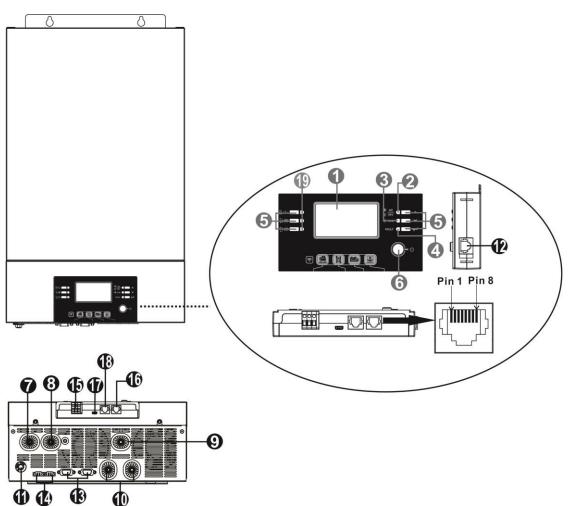

- 1. LCD display
- 2. Status indicator
- 3. Charging indicator
- 4. Fault indicator
- 5. Function buttons
- 6. Power on/off switch
- 7. AC input
- 8. AC output
- 9. PV input
- 10. Battery input
- 11. Circuit breaker
- 12. Remote LCD panel communication port
- 13. Parallel communication port (only for parallel model)
- 14. Current sharing port (only for parallel model)
- 15. Dry contact
- 16. RS-232 communication port
- 17. USB port
- 18. BMS communication port: CAN and RS232 or RS485
- 19. LED indicator for USB function settings

NOTE: For parallel model installation and operation, please check "PARALLEL FUNCTION" chapter for the details.



INSTALLATION


Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- The unit x 1
- User manual x 1
- Communication cable x 1
- Software CD x 1

Preparation


Before connecting all wirings, please take off bottom cover by removing two screws as shown below.

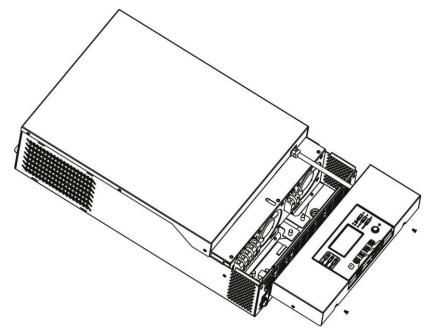

Mounting the Unit

Consider the following points before selecting where to install:


- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the right diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

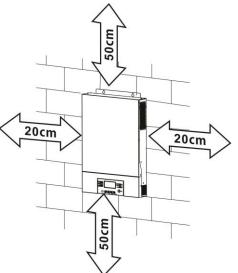

SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.



Install the unit by screwing three screws. It's recommended to use M4 or M5 screws.

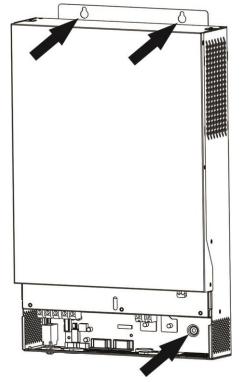

Battery Connection

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

Ring terminal:

0

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

(Q)	


Model	Typical	Battery	Wire Size	Ring Terminal		nal	Torque
	Amperage	Capacity		Cable	Dimer	nsions	Value
				mm ²	D (mm)	L (mm)	
	2004	200411	1*1/0AWG	60	6.4	49.7	
3KW	200A	200AH	2*4AWG	44	6.4	49.7	2~3 Nm
	2004	200411	1*1/0AWG	60	6.4	49.7	
5KW	200A	200AH	2*4AWG	44	6.4	49.7	2~3 Nm

Recommended battery cable and terminal size:

Please follow below steps to implement battery connection:

- 1. Assemble battery ring terminal based on recommended battery cable and terminal size.
- 2. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for 3KW model and at least 200Ah capacity battery for 5KW model.
- 3. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 2-3 Nm. Make sure polarity at both the battery and the inverter/charge is correctly connected and ring terminals are tightly screwed to the battery terminals.



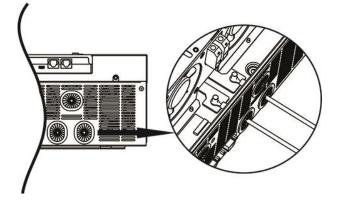

WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.

CAUTION!! Do not place anything between the flat part of the inverter terminal and the ring terminal. Otherwise, overheating may occur.

CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.

CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 30A for 3KW, 50A for 5KW.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires

Model	Gauge	Torque Value
3KW	10 AWG	1.2~ 1.6 Nm
5KW	8 AWG	1.4~ 1.6Nm

Please follow below steps to implement AC input/output connection:


- 1. Before making AC input/output connection, be sure to open DC protector or disconnector first.
- 2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
- Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (
 first.


⊖→Ground (yellow-green)

L→LINE (brown or black)

N→Neutral (blue)



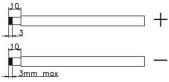

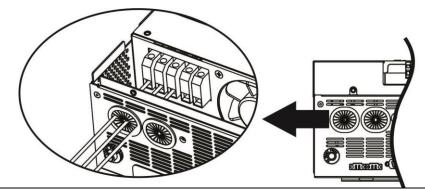


WARNING:

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

- Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.
 Be sure to connect PE protective conductor () first.
 - ⊖→Ground (yellow-green)
 - L→LINE (brown or black)

N→Neutral (blue)

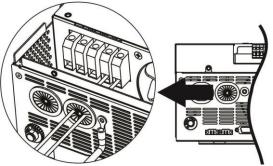

5. Make sure the wires are securely connected.

CAUTION: Important

Be sure to connect AC wires with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation.

CAUTION: Important

When input source is the generator, it's suggested to choose the generator by following parameters:

- The recommend generator rating should be at least 2X of inverter capacity.
- Generator output: Pure Sine Wave
- Generator output voltage rms range: 180 ~ 270Vac
- Generator output frequency range: 45Hz ~ 63Hz

It's recommended to test the generator with the inverter before the installation. Few generators complied above parameters may still not be accepted by the inverter as the input source.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.



PV Connection

CAUTION: Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It'' very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Typical Amperage	Cable Size	Torque
3KW	60A		1.21.6 Nm
5KW	80A	6 AWG	1.2~1.6 Nm

PV Module Selection:


When selecting proper PV modules, please be sure to consider below parameters:


- 1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
- 2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

Solar Charging Mode				
INVERTER MODEL	ЗКѠ	5KW		
Max. PV Array Open Circuit Voltage	145Vdc			
PV Array MPPT Voltage Range	30~115Vdc	60~115Vdc		

Please follow below steps to implement PV module connection:

- 1. Remove insulation sleeve 10 mm for positive and negative conductors.
- Check correct polarity of connection cable from PV modules and PV input connectors. Then, connect positive pole (+) of connection cable to positive pole (+) of PV input connector. Connect negative pole (-) of connection cable to negative pole (-) of <u>PV</u> input connector.

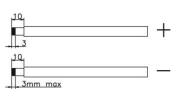


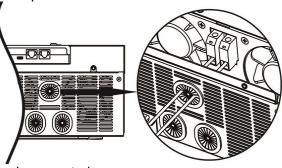

3. Make sure the wires are securely connected.

Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown on the below chart.

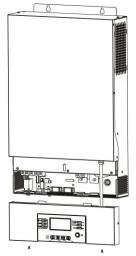





Remote Display Panel Installation

The LCD panel can be removable and installed in a remote site with an optional communication cable. Please follow below steps to implement this remote panel installation.


Step 1. Loosen the screw on the two sides of bottom case and push up the case cover. Then, remove screw on the top of the display panel. Now, the display can be removed from the bottom case. Then, pull out the cable from the remote communication port.

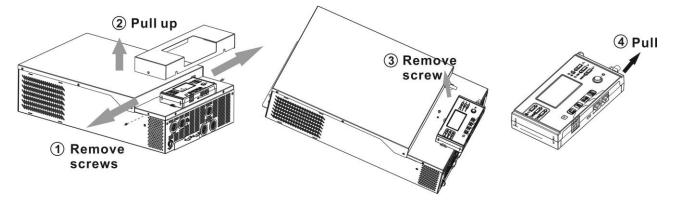

Step 2. Drill two holes in the marked locations with two screws as shown below chart. Place the panel on the surface and align the mounting holes with the two screws. Then, use one more screw on the top to fix the panel to the wall and check if the remote panel is firmly secured.

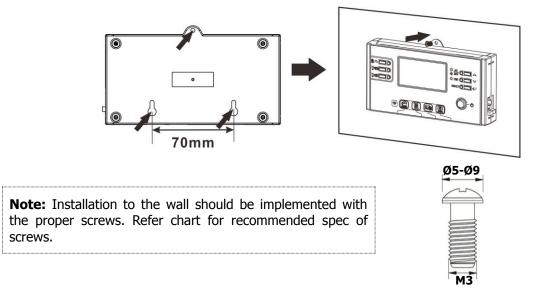

Step 3. Connect LCD panel to the inverter with an optional RJ45 communication cable as below chart.

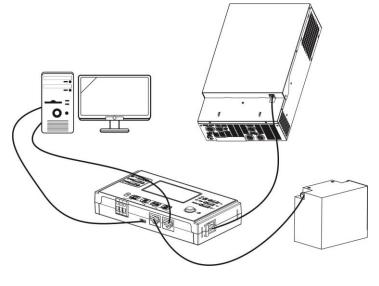



Communication Connection

Serial Connection

Please use supplied communication cable to connect to inverter and PC. Insert bundled CD into a computer and follow on-screen instruction to install the monitoring software. For the detailed software operation, please check user manual of software inside of CD.

Wi-Fi Connection

This unit is equipped with a Wi-Fi transmitter. Wi-Fi transmitter can enable wireless communication between off-grid inverters and monitoring platform. Users can access and control the monitored inverter with downloaded APP. You may find "WatchPower" app from the Apple[®] Store or "WatchPower Wi-Fi" in Google[®] Play Store. All data loggers and parameters are saved in iCloud. For quick installation and operation, please check Appendix C.

Carrier 🗢	6:10 Ph		-
	Overvie	w	
	Normal		
Devices	Offine		
	• Alarm		
	rer:0.1kW To:	lay Power:0.0kWh	
1W 0.15			
0.12			
1.11			
<u>.</u>	4 6 8 10 12	54 56 18 20 1	12 24
D	1110	Ģ	2
Overview	 Devices 	1	ña -

Dry Contact Signal

There is one dry contact (3A/250VAC) available on the rear panel. It could be used to deliver signal to external device when battery voltage reaches warning level.

Unit Status		Condition			ct port: NC C NO
				NC & C	NO & C
Power Off	Unit is off an	d no output is	powered.	Close	Open
	Output is pov	wered from Uti	lity.	Close	Open
	Output is powered	Program 01 set as USB	Battery voltage < Low DC warning voltage	Open	Close
Descare	from Battery power or	(utility first)	Battery voltage > Setting value in Program 13 or battery charging reaches floating stage	Close	Open
Power On	Solar energy.	Program 01 is set as	Battery voltage < Setting value in Program 12	Open	Close
		SBU (SBU priority) or SUB (solar first)	Battery voltage > Setting value in Program 13 or battery charging reaches floating stage	Close	Open


BMS Communication

If connecting to lithium battery, it's requested to buy a special communication cable. For the detailed BMS communication and installation, please check Appendix B – BMS Communication Installation.



OPERATION


Power ON/OFF

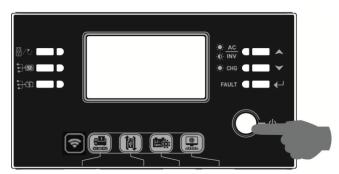

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch to turn on the unit.

Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

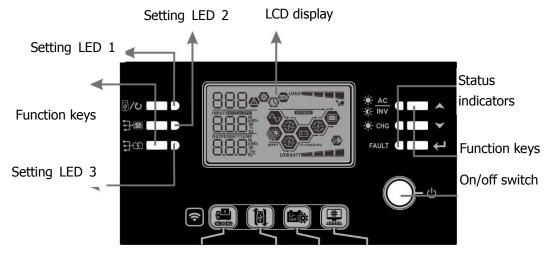

LED Indicators


LED Indicator			Messages	
Setting LED1		Green	Solid On	Output powered by utility
Setting LED2		Green	Solid On	Output powered by PV
Setting	LED3	Green	Solid On	Output powered by battery
		Cueen	Solid On	Output is available in bypass mode
	-₩- <u>AC</u> -⋈-INV	Green	Flashing	Output is powered by battery or AC in inverter mode
Status	-X- 040	Green	Solid On	Battery is fully charged
Indicator		Green	Flashing	Battery is charging.
FAULT		Red	Solid On	Fault mode
	FAULI	Neu	Flashing	Warning mode



Function Keys

Function Key		Description	
₩ / U	ESC	Exit setting mode	
	USB function setting Select USB OTG functions		
	Up	To last selection	
$\widehat{}$	Down	To next selection	
←	Enter	To confirm the selection in setting mode or enter setting mode	

LCD Display Icons

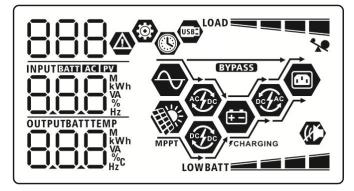

Ιςοι	n		Function description		
Input Source In	formation				
Indicates the A		Indicates the AC	Cinput.		
PV		Indicates the PV	/ input		
		Indicate input v	oltage, input frequency, PV voltage, charger current,		
		charger power, l	battery voltage.		
Configuration P	rogram and Fa	ault Informatio	n		
888 🛛		Indicates the se	tting programs.		
		Indicates the wa	arning and fault codes.		
Warning: 88 flashing with warning code.			flashing with warning code.		
		Fault: Fault:	lighting with fault code		
Output Informa	tion				
		Indicate output	voltage, output frequency, load percent, load in VA,		
		load in Watt and	d discharging current.		
Battery Informa	ation	_			
BATT			y level by 0-24%, 25-49%, 50-74% and 75-100% in nd charging status in line mode.		
In AC mode, it wi	ll present batter	y charging status			
Status	Battery voltage	9	LCD Display		
	<2V/cell		4 bars will flash in turns.		
Constant	2 ~ 2.083V/cell		Bottom bar will be on and the other three bars will flash in turns.		
Current mode / Constant	2.083 ~ 2.167V/cell		Bottom two bars will be on and the other two bars will flash in turns.		
Voltage mode	> 2.167 V/cell		Bottom three bars will be on and the top bar will flash.		
Floating mode. E	Batteries are full	y charged.	4 bars will be on.		



n battery mode, it will pre	sent battery capacity.	1			
Load Percentage	Battery Voltage	LC	CD Display		
	< 1.85V/cell LOWBATT				
Load >50%	1.85V/cell ~ 1.933V/cell	BATT			
Luau >50%	1.933V/cell ~ 2.017V/cell	BATT≦			
	> 2.017V/cell	BATT≦			
	< 1.892V/cell	LOWBATT			
Load < 50%	1.892V/cell ~ 1.975V/cell	BATT≦			
LUdu < 50%	1.975V/cell ~ 2.058V/cell	BATT≦			
	> 2.058V/cell	BATT≣			
oad Information					
2	Indicates overload.				
	Indicates the load level by 0	24%, 25-49%,	50-74% and 75-100%.		
OAD	0%~24%		25%~49%		
—	LOAD	LOAD LOAD			
	50%~74%				
		LOAD			
ode Operation Inform	ation				
\rightarrow	Indicates unit connects to the	Indicates unit connects to the mains.			
MPPT	Indicates unit connects to the	Indicates unit connects to the PV panel.			
BYPASS	Indicates load is supplied by	utility power.			
A Geo	Indicates the utility charger	ircuit is workin	g.		
	Indicates the solar charger	Indicates the solar charger circuit is working.			
÷.	Indicates the DC/AC inverte	Indicates the DC/AC inverter circuit is working.			
	Indicates unit alarm is disab	Indicates unit alarm is disabled.			
USB	Indicates USB disk is conne	Indicates USB disk is connected.			
	Indicates timer setting or tir	Indicates timer setting or time display			



LCD Setting

After pressing and holding " \checkmark " button for 3 seconds, the unit will enter setting mode. Press " \bigstar " or " \checkmark " button to select setting programs. And then, press " \checkmark " button to confirm the selection or "" button to exit.

Setting Programs:

Progra	Description	Selectable option	
m	•		
00	Exit setting mode	Escape	
		ESC	
		USB : Utility first (default)	Utility will provide power to the loads as first priority. If Utility energy is unavailable, solar energy and battery provides power the loads.
		SUB: Solar first	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, utility energy will supply power
01	Output source priority: To configure load power source priority	SUB	to the loads at the same time. Battery provides power to the loads only when solar and utility is not sufficient.
			Solar energy provides power to the loads as first priority. If solar energy is not sufficient
		SBU priority	to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the
		560	loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12 or solar and battery is not sufficient.



02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A (default)	3KW model setting range is from 10A to 120A and increment of each click is 10A. 5KW model setting range is from 10A to 140A and increment of each click is 10A.
		AGM (default)	Flooded C S C FL I f "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further
05	Battery type	PYL WECO battery (only for 48V model)	If selected, programs of 02, 12, 26, 27 and 29 will be auto-configured per battery supplier recommended. No need for further adjustment.
		Soltaro battery (only for 48V model)	If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.
		LIb-protocol compatible battery	Select " LIb" if using Lithium battery compatible to Lib protocol. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.



5	Battery type	3 rd party Lithium battery	If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting. Please contact the battery supplier for installation procedure.
		Restart disable (default)	Restart enable
06	Auto restart when overload occurs	06 🔍 🏾	06 👁
		լեզ	rre
		Restart disable (default)	Restart enable
07	Auto restart when over temperature occurs	07 @	רט 🍽
		٤⊦d	۲ ۲
		50Hz (default)	60Hz
		09 🚳	09 🚳
09	Output frequency		00
		58	50 _{#2}
		Automatically (default)	If selected and utility is available, inverter will work in line mode. Once utility frequency is unstable, inverter will work in bypass mode if bypass function is not forbidden in program 23.
		Online mode	If selected, inverter will work in
10		I[] @	line mode when utility is available.
10	Operation Logic		
		ONL	
		ECO Mode	If selected and bypass is not forbidden in program 23, inverter will work in ECO mode when utility is available.
		8033	
	Maximum utility charging	2A	10A
	current	🐵	🐵
11	Note: If setting value in program 02 is smaller than that in program in 11, the		
	inverter will apply charging	2.	



-		r	
	current from program 02 for utility charger.	20A	30A (default)
		-05	30^
		40A	50A 🐼
		40.	50.
		60A	
		80·	
		3KW default setting: 23.0V	5KW default setting: 46.0V
12	Setting voltage point back to utility source when selecting "SBU" (SBU priority) or "SUB" (Solar		
	first) in program 01	each click is 0.5V.	om 22.0V to 28.5V and increment of om 44.0V to 57.0V and increment of
		3KW model: The setting range increment of each click is 0.5V	
	Setting voltage point back to battery mode when	Battery fully charged	27.0V (default)
13	selecting "SBU" (SBU priority) or "SUB" (Solar	i j 🖤	ij ¥
	first) in program 01		
		5KW model: The setting range increment of each click is 1.0V	
	Setting voltage point back to battery mode when	Battery fully charged	54.0V (default)
13	selecting "SBU" (SBU priority) or "SUB" (Solar	[©]	¦_} 🌚
	first) in program 01		



		SbL: Solar energy for battery first UCB: Allow utility to charge battery (Default)	Solar energy charges battery first and allow the utility to charge battery.
		56L UC6	
		SbL: Solar energy for battery first UdC: Disallow utility to charge battery	Solar energy charge battery first and disallow the utility to charge battery.
16	Solar energy priority: To configure solar energy priority for battery and load	18 © 561 880	
		SLb: Solar energy for load first UCb: Allow utility to charge battery	Solar energy provides power to the load first and also allow the utility to charge battery.
		566 866	
		SLb: Solar energy for load first UdC: Disallow utility to charge battery	Solar energy provides power to the load first and disallow the utility to charge battery.
		566 880	
18	Alarm control	Alarm on (default)	Alarm off
		600	60F
19	Auto return to default display screen	Return to default display screen (default)	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		ESP	



		Stay at latest screen	If selected, the display screen will
		9 🐵	stay at latest screen user finally switches.
		FEP	
		Backlight on (default)	Backlight off
20	Backlight control	50 ø	50 ø
		LON	LOF
		Alarm on (default)	Alarm off
22	Beeps while primary source is interrupted	22 @	95 @
		800	80F
23	Bypass function:	Bypass Forbidden	If selected, inverter won't work in bypass/ECO modes.
		69F	
		Bypass disable	If selected and power ON button is pressed on, inverter can work in bypass/ECO mode only if utility is available.
		699	
23	Bypass function:	Bypass enable (default)	If selected and no matter power ON button is pressed on or not, inverter can work in bypass mode if utility is available.
		698	
		Record enable	Record disable (default)
25	Record Fault code	25 👁	25 👁
		FEN	892
26	Bulk charging voltage (C.V voltage)	3KW default setting: 28.2V	5KW default setting: 56.4V
		·— ·—··	



			program 5, this program can be set 0V to 32.0V for 3KW model and 48.0V
		to 64.0V for 5KW model. Inc	
27	Floating charging voltage		5KW default setting: 54.0V
28	AC output mode *This setting is able to set up only when the inverter is in standby mode, Be sure that on/off Switch is in "OFF" status.	Single Single Parallel Parallel PAIL L1 phase 28 28 28 28 28 28 28 28	 When the unit is operated alone, please select "SIG" in program 28. When the units are used in parallel for single phase application, please select "PAL" in program 28. Please refer to 5-1 for detailed information. When the units are operated in 3-phase application, please choose "3PX" to define each inverter. It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four inverters in one phase. Please refers to 5-2 for detailed information. Please select "3P1" in program 28 for the inverters connected to L1 phase, "3P2" in program 28 for the inverters connected to L3 phase. Be sure to connect share current cable to units which are on the same phase. Do NOT connect share current cable
			between units on different phases.
29	 Low DC cut-off voltage: If battery power is only power source available, inverter will shut down. If PV energy and battery power are 	3KW default setting: 21.0V	5KW default setting: 42.0V



	 available, inverter will charge battery without AC output. If PV energy, battery power and utility are all available, inverter will transfer to line mode and provide output power to loads. 	up. Setting range is from 2 to 54.0V for 5KW model. I cut-off voltage will be fixe percentage of load is conr	
32	Bulk charging time	set up. Setting range is fro	5min 32 • 5 ed in program 05, this program can be pm 5min to 900min. Increment of each
33	Battery equalization	Battery equalization enabl	Keeping auto-charging time. e Battery equalization disable (default) 33 Image: Constraint of the second
34	Battery equalization voltage	3KW default setting: 29.2V 3KW default setting: 29.2V 3KW default setting: 29.2V Setting range is from 24.0 64.0V for 5KW model. Inc	V 5KW default setting: 58.4V <u><u><u></u></u><u><u><u></u></u><u><u></u><u><u></u></u><u><u></u><u></u><u></u><u><u></u><u></u><u></u><u><u></u><u></u><u></u></u></u></u></u></u></u>
35	Battery equalized time	60min (default) 35 © 60	Setting range is from 5min to 900min. Increment of each click is 5min.
36	Battery equalized timeout	120min (default) 36 ©	Setting range is from 5min to 900 min. Increment of each click is 5 min.



		30days (default)	Setting range is from 0 to 90 days.
		11 ()	Increment of each click is 1 day
37	Equalization interval		
57			
		304	
		Disable (default)	Enable
		39 ®	[©]
39	Equalization activated	RdS	860
59	immediately	If equalization function is e	enabled in program 33, this program can
			elected in this program, it's to activate diately and LCD main page will shows
			tted, it will cancel equalization function
		until next activated equaliz	zation time arrives based on program 37
		setting. At this time.	" will not be shown in LCD main page.
		Not reset(Default)	Reset
	Reset all stored data for PV	ЧП 🚳	48 🐵
40	generated power and	10 -	.0
70	output load energy		
	output loud energy	Որե	l-SE
		Not reset(Default)	Reset
		97 🐵	97 🐵
93	Erase all data log		
	5		
		ՈԻԵ	FSE
		3 minutes	5 minutes
		37 8	37 8
		-	
		j	
	Data log recorded interval	10 minutes(default)	20 minutes
	*The maximum data log		21 -
94	number is 1440. If it's over		
	1440, it will re-write the first log.	10	20
		30 minutes	60 minutes
		- ·	- ·
		30	60
1	1		



95	Time setting — Minute	95 © n () 00	For minute setting, the range is from 00 to 59.
96	Time setting – Hour	96 👁 HOU 00	For hour setting, the range is from 00 to 23.
97	Time setting– Day	97 © 889 01	For day setting, the range is from 00 to 31.
98	Time setting— Month	98 © -00 01	For month setting, the range is from 01 to 12.
99	Time setting – Year	99 © 988 17	For year setting, the range is from 17 to 99.

USB Function Setting

Please insert USB disk into USB port (). Press and hold " button for 3 seconds to enter USB function setting mode. These functions include to upgrade inverter firmware, export data log and re-write internal parameters from USB disk.

Procedure	LCD Screen
Step 1: Press and hold "" button for 3 seconds to enter USB function setting mode.	പാറകേക
Step 2: Press [、]	UPC ♥ ● 582 186

Step 3: Please select setting program	by following the procedure.
---------------------------------------	-----------------------------

Program#	# Operation Procedure LCD Scree	
₩/ ひ:	This function is to upgrade inverter firmware. If firmware upgrade is needed,	please check with
Upgrade	your dealer or installer for detail instructions.	
firmware		



Re-write internal parameters	This function is to over-write all parameter settings (TEXT file) with settings USB disk from a previous setup or to duplicate inverter settings. Please chec or installer for detail instructions.			
₽ ¢⊅.	Press "귀약" button to export data log from the inverter to USB disk. If the selected function is ready, LCD will display "나다". Press "한/신" button to confirm the selection again.	LOG ⊦ď9	8	
Export data log	 Press "ション" button to select "Yes", LED 1 will flash once every second during the process. It will only display LOG and all LEDs will be on after this action is complete. Then, press "ジーン" button to return to main screen. Or press "シュン" button to select "No" to return to main screen. 	LOG 985 00		

If no button is pressed for 1 minute, it will automatically return to main screen.

Error message for USB On-the-Go functions:

Error Code	Messages
UO I	No USB disk is detected.
50U	USB disk is protected from copy.
U03	Document inside the USB disk with wrong format.

If any error occurs, error code will only show 5 seconds. After 5 seconds, it will automatically return to display screen.

Display Setting

The LCD display information will be switched in turn by pressing the "UP" or "DOWN" button. The selective information will be switched as per the following orders:

Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	Input Voltage=230V, output voltage=230V
Input frequency	Input frequency=50Hz LOAD
	24

	PV voltage=80V
PV voltage	
	PV current = 2.5A
PV current	
	PV power = 500W
PV power	
	AC and PV charging current=50A
	OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT OUTPUT
	PV charging current=50A
Charging current	
	AC charging current=50A



	AC and PV charging power=500W
	OUTPUT OUTPUT OUTPUT OVERAGING BATT PV charging power=500W
Charging power	AC charging power=500W
Battery voltage and output voltage	Battery voltage=50.0V, output voltage=230V
	Output frequency=50Hz
Output frequency	
	Load percent=70%
Load percentage	



	When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.
Load in VA	SOUTPUT Suppresent x.xkVA like below chart.
	OUTPUT USO ka MPPT CHARGING BATT
	When load is lower than 1kW, load in W will present xxxW like below chart.
Load in Watt	When load is larger than 1kW (\geq 1KW), load in W will present x.xkW like below chart.
	Battery voltage=50.0V, discharging current=50A
Battery voltage/DC discharging current	
PV energy generated today and Load output energy today	PV energy generated Today = 3.88kWh, Load output energy Today = 9.88kWh.



PV energy generated this month and Load output energy this month.	This PV month energy = 388kWh, Load month energy= 988kWh.
PV energy generated this year and Load output energy this year.	This PV year energy = 3.88MWh, Load year energy = 9.88MWh.
PV energy generated totally and Load output total energy.	PV Total energy = 38.8MWh, Load Output Total energy = 98.8MWh.
Real date.	Real date Nov 28, 2017.
Real time.	Real time 13:20.
Main CPU version checking.	Main CPU version 00014.04.




Secondary CPU version checking.	Secondary CPU version 00001.23.
Wi-Fi version checking.	Wi-Fi version 00000.24.
SCC version checking	SCC version 00003.03.



Operating Mode Description

Operation mode	Description	LCD display
Standby mode Note: *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.	No output is supplied by the unit but it still can charge batteries.	Charging by utility and PV energy.
Fault mode Note: *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	Utility can bypass.	No charging and Bypass
Bypass/ECO Mode	The unit will provide output power from the utility. PV energy and utility can charge batteries.	Charging by utility and PV energy.



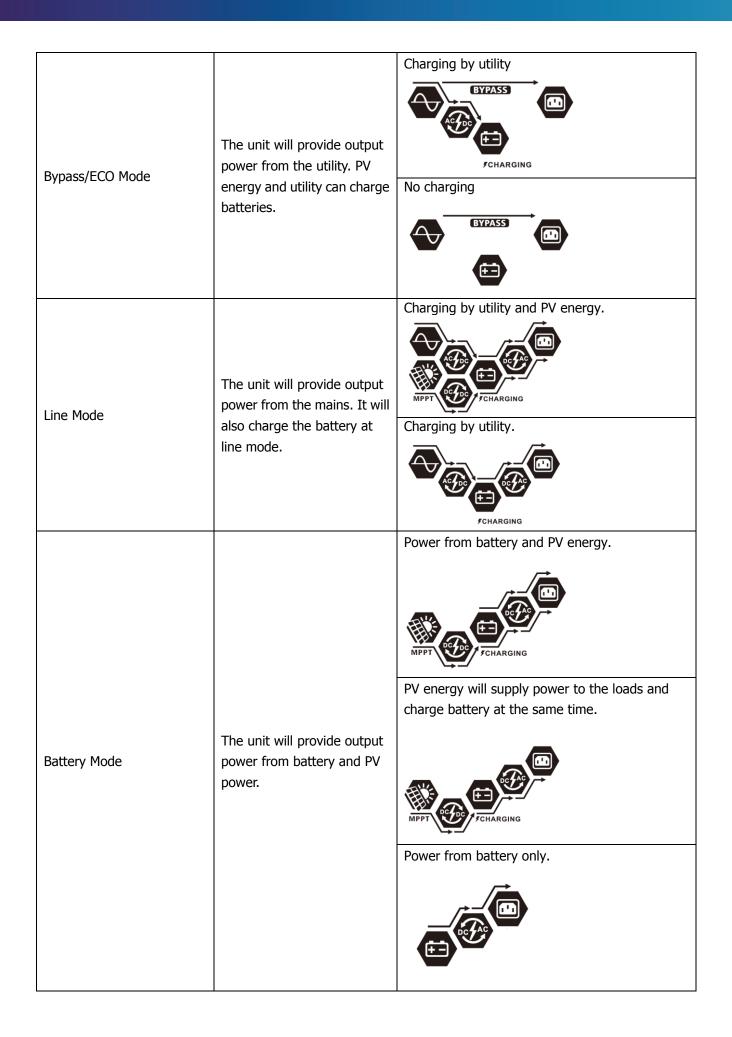



Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	F0
02	Over temperature	1605
03	Battery voltage is too high	1683
04	Battery voltage is too low	F84
05	Output short circuited or over temperature is detected by internal converter components.	FOS
06	Output voltage is too high.	IF86
07	Overload time out	F87
08	Bus voltage is too high	F08
09	Bus soft start failed	F89
50	PFC over current	FS0
51	OP over current	FS (
52	Bus voltage is too low	1852
53	Inverter soft start failed	1853
55	Over DC voltage in AC output	FSS
56	Battery is not connected	F58
57	Current sensor failed	F57
58	Output voltage is too low	F58

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
02	Over temperature	None	@ 50
03	Battery is over-charged	Beep once every second	[]]@
04	Low battery	Beep once every second	[]4@
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	[]@
32	Communication interrupted	None	32@
69	Battery equalization	None	E9@
68	Battery is not connected	None	



Battery Equalization

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.


• How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 33 first. Then, you may apply this function in device by either one of following methods:

- 1. Setting equalization interval in program 37.
- 2. Active equalization immediately in program 39.


• When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

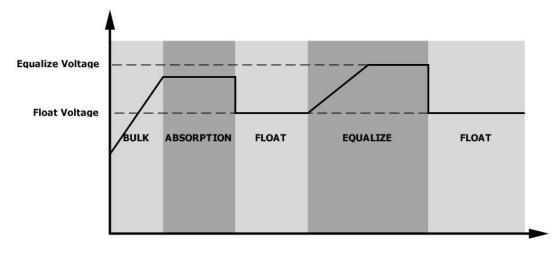


• Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

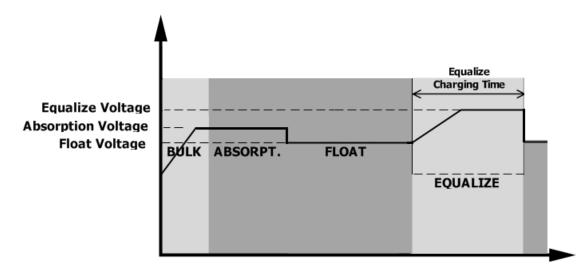



However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

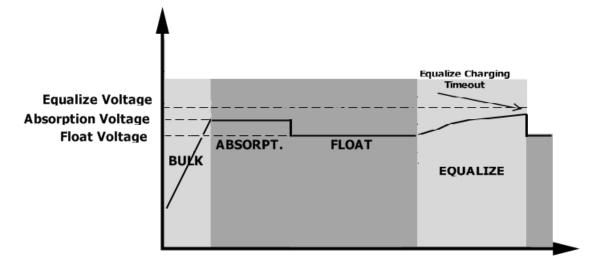



SPECIFICATIONS

Table 1 Line Mode Specifications

INVERTER MODEL	ЗКѠ	5КW		
Input Voltage Waveform	Sinusoidal			
Nominal Input Voltage	23	0Vac		
Low Loss Voltage	110	/ac±7V		
Low Loss Return Voltage	120	/ac±7V		
High Loss Voltage	280\	/ac±7V		
High Loss Return Voltage	270\	/ac±7V		
Max AC Input Voltage	300Vac			
Nominal Input Frequency	50Hz / 60Hz (Auto detection)			
Low Loss Frequency	46(56)±1Hz			
Low Loss Return Frequency	46.5(57)±1Hz			
High Loss Frequency	54(6-	4)±1Hz		
High Loss Return Frequency	53(6)	3)±1Hz		
Power Factor	>	0.98		
Output Short Circuit Protection	Line mode: Circuit Breaker Battery mode: Electronic Circuits			
Efficiency (Line Mode)		k Efficiency)		
Transfer Time		Battery mode 0ms →Bypass 4ms		



Table 2 Battery Mode Specifications

INVERTER MODEL	3KW	5KW			
Rated Output Power	3KVA/3KW	5KVA/5KW			
Output Voltage Waveform	Pure Sine Wave				
Output Voltage Regulation	230Vac±5%				
Output Frequency	50Hz	or 60Hz			
Peak Efficiency	9	0%			
Overload Protection	5s@≥150% load; 10	0s@105%~150% load			
Surge Capacity	2* rated power	er for 5 seconds			
Nominal DC Input Voltage	24Vdc	48Vdc			
Operating Range	20Vdc -34Vdc	40Vdc -66Vdc			
Cold Start Voltage	23Vdc	46Vdc			
Low DC Warning Voltage					
@ load < 50%	22.5Vdc	45.0Vdc			
@ load ≥ 50%	22.0Vdc	44.0Vdc			
Low DC Warning Return Voltage					
@ load < 50%	23.5Vdc	47.0Vdc			
@ load ≥ 50%	23.0Vdc	46.0Vdc			
Low DC Cut-off Voltage					
@ load < 50%	21.5Vdc	43.0Vdc			
@ load ≥ 50%	21.0Vdc	42.0Vdc			
High DC Recovery Voltage	32Vdc	64Vdc			
High DC Cut-off Voltage	34Vdc	66Vdc			
No Load Power Consumption	<75W	<75W			



Table 3 Charge Mode Specifications

Utility Char	ging Mode							
INVERTER	MODEL	3KW 5KW						
Charging C	urrent	Default: 30/	A, max: 60A					
@ Nominal I	nput Voltage	Delaut. Jor	, max. ooA					
Bulk	Flooded	29.2Vdc	58.4Vdc					
Charging	Battery	23.2000	30.1740					
Voltage	AGM / Gel	28.2Vdc	56.4Vdc					
Voltage	Battery	20.2 Vuc	30.1740					
Floating Ch	arging Voltage	27Vdc	54Vdc					
Overcharge	Protection	34Vdc 66Vdc						
Charging A	lgorithm	3-Step						
Charging Algorithm Charging Curve		Battery Voltage, per cell 2.43Vdc (2.35Vdc) 2.25Vdc T0 T1 = 10* T0, minimum 10mins, maximum 8hm (Constant Current) Bulk Absorption (Constant Voltage)	Charging Current, % Voltage 100% 50% Current Maintenance (Floating)					

Solar Charging Mode (MP	PPT type)					
INVERTER MODEL	ЗКѠ	5KW				
Rated Power	1500W	4000W				
Maximum charging current	60A	80A				
Efficiency	98.0	% max.				
Max. PV Array Open Circuit Voltage	145Vdc					
PV Array MPPT Voltage Range	30~115Vdc	60~115Vdc				
Battery Voltage Accuracy	+/-	-0.3%				
PV Voltage Accuracy	+	-/-2V				
Charging Algorithm	3-5	Step				
Joint Utility and Solar Cha	arging					
Max Charging Current	120A	140A				
Default Charging Current	6	0A				



Table 4 ECO/Bypass Mode Specifications

Bypass Mode						
INVERTER MODEL	3KW 5KW					
Input Voltage Waveform	Sinusoidal					
Low Loss Voltage	176Vac±7V					
Low Loss Return Voltage	186Vac±7V					
High Loss Voltage	280Vac±7V					
High Loss Return Voltage	270Vac±7V					
Nominal Input Frequency	50Hz / 60Hz (Auto detection)					
Low Loss Frequency		46(56)±1Hz				
Low Loss Return Frequency		46.5(57)±1Hz				
High Loss Frequency	54(64)±1Hz					
High Loss Return Frequency		53(63)±1Hz				

Table 5 General Specifications

INVERTER MODEL	ЗКѠ	5KW			
SCC type	МРРТ				
Parallel-able	YE	S			
Communication	RS232 a	nd Wi-Fi			
Safety Certification	CE				
Operating Temperature	0°C to 55°C				
Range	0 0 0 55 0				
Storage temperature	-15°C~ 60°C				
Humidity	5% to 95% Relative Humidity (Non-condensing)				
Dimension	140 - 202 - 525				
(D*W*H), mm	140 x 303 x 525				
Net Weight, kg	13.0	13.5			



TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do	
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	 Re-charge battery. Replace battery. 	
No response after power on.	No indication.	 The battery voltage is far too low. (<1.4V/Cell) Battery polarity is connected reversed. 	 Check if batteries and the wiring are connected well. Re-charge battery. Replace battery. 	
	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.	
Mains exist but the unit works in battery mode.	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	 Check if AC wires are too thin and/or too long. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance) 	
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.	
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.	
	Fault code 07	Overload error. The inverter is overload 110% and time is up.	Reduce the connected load by switching off some equipment.	
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.	
	Fault code 02	Internal temperature of inverter component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.	
		Battery is over-charged.	Return to repair center.	
Buzzer beeps	Fault code 03	The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.	
continuously and red LED is on.	Fault code 01	Fan fault	Replace the fan.	
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	 Reduce the connected load. Return to repair center 	
	Fault code 08/09/53/57	Internal components failed.	Return to repair center.	
	Fault code 50	PFC over current or surge.		
	Fault code 51	OP over current or surge.	Restart the unit, if the error	
	Fault code 52	Bus voltage is too low.	happens again, please return to repair center.	
	Fault code 55	Output voltage is unbalanced.		
	Fault code 56	Battery is not connected well or fuse is burnt.	If the battery is connected well, please return to repair center.	



PARALLEL FUNCTION

1. Introduction

This inverter can be used in parallel for two applications.

- 1. Parallel operation in single phase with up to 9 units. The supported maximum output power is 45KW/45KVA.
- 2. Maximum 9 units work together to support three-phase equipment. Seven units support one phase maximum. The supported maximum output power is 45KW/45KVA and one phase can be up to 35KW/35KVA

NOTE: If this unit is bundled with share current cable and parallel cable, this inverter is default supported parallel operation. You may skip section 3. If not, please purchase parallel kit and install this unit by following instruction from professional technical personnel in local dealer.

2. Package Contents

In parallel kit, you will find the following items in the package:



Parallel board







Parallel communication cable Current sharing cable

3. Parallel board installation


Step 1: Remove bottom case by unscrewing all screws as shown below.

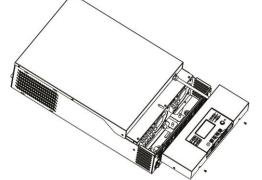

Step 2: Remove two screws as below chart and remove 2-pin and 14-pin cables. Take out the board under the communication board.

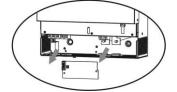


Step 3: Remove two screws as below chart to take out cover of parallel communication.

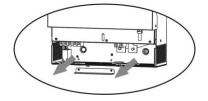




Step 4: Install new parallel board with 2 screws tightly.

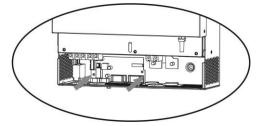


Step 5: Re-connect 2-pin and 14-pin to original position on parallel board as shown below chart.

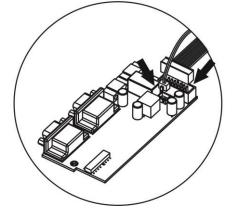

Step 6: Put wire cover back to the unit. Now the inverter is providing parallel operation function.

4. Mounting the Unit

When installing multiple units, please follow below chart.

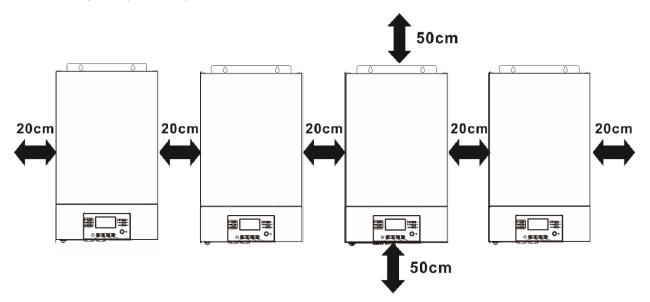

NOTE: For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit. Be sure to install each unit in the same level.




5. Wiring Connection

The cable size of each inverter is shown as below:

		R	Ring Terminal			
Model	Wire Size	Cable	Cable Dimensions		Torque value	
		mm ²	D (mm)	L (mm)	value	
21/11/	1*1/0AWG	60	6.4	49.7	2~3 Nm	
3KW	2*4AWG	44	6.4	49.7	2~ 5 1111	
	1*1/0AWG	60	6.4	49.7	2~3 Nm	
5KW	2 * 4AWG	44	6.4	49.7	2~ 3 INTI	

Recommended battery cable and terminal size for each inverter:

Ring terminal:

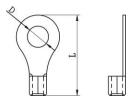

WARNING: Be sure the length of all battery cables is the same. Otherwise, there will be voltage difference between inverter and battery to cause parallel inverters not working.

Recommended AC input and output cable size for each inverter:

Model	AWG no.	Torque
3KW	10 AWG	1.2~1.6Nm
5KW	8 AWG	1.4~1.6Nm

You need to connect the cables of each inverter together. Take the battery cables for example: You need to use a connector or bus-bar as a joint to connect the battery cables together, and then connect to the battery terminal. The cable size used from joint to battery should be X times cable size in the tables above. "X" indicates the number of inverters connected in parallel.

Regarding AC input and output, please also follow the same principle.

CAUTION!! Please install the breaker at the battery and AC input side. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of battery or AC input. The recommended mounted location of the breakers is shown in the figures in 5-1 and 5-2.

Recommended breaker specification of battery for each inverter:

Model	1 unit*
3KW	150A/60VDC
5KW	125A/80VDC

*If you want to use only one breaker at the battery side for the whole system, the rating of the breaker should be X times current of 1 unit. "X" indicates the number of inverters connected in parallel.

Recommended breaker specification of AC input:

Model	2 units	3 units	4 units	5 units	6 units	7 units	8 units	9 units
3KW	80A	120A	160A	200A	240A	280A	320A	360A
5KW	100A	150A	200A	250A	300A	350A	400A	450A

Note1: Also, you can use 40A breaker for 3KW and 50A for 5KW for only 1 unit and install one breaker at its AC input in each inverter.

Note2: Regarding three-phase system, you can use 4-pole breaker directly and the rating of the breaker should be compatible with the phase current limitation from the phase with maximum units



Recommended battery capacity

Inverter parallel numbers	2	3	4	5	6	7	8	9
Battery Capacity	800AH	1200AH	1600AH	2000AH	2400AH	2800AH	3200AH	3600AH


WARNING! Be sure that all inverters will share the same battery bank. Otherwise, the inverters will transfer to

fault mode.


5-1. Parallel Operation in Single phase

Two inverters in parallel:

Power Connection

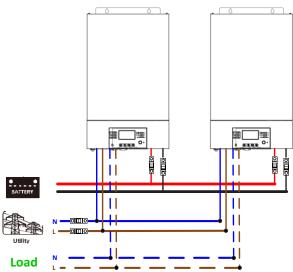


Communication Connection

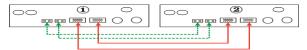


Three inverters in parallel:

Power Connection

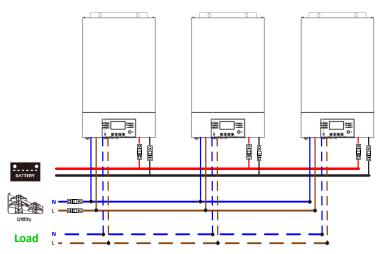




Communication Connection

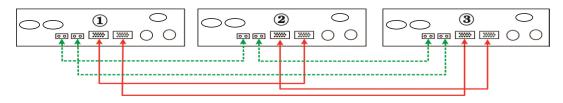


Four inverters in parallel:

Power Connection

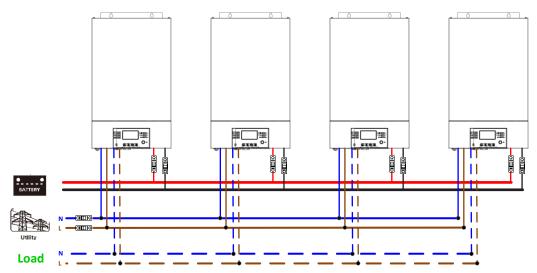


Communication Connection

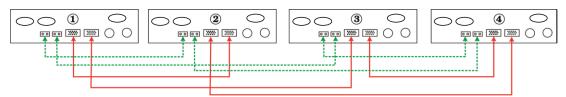


Five inverters in parallel:

Power Connection

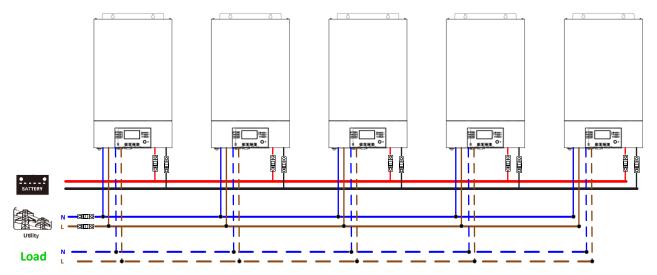




Communication Connection

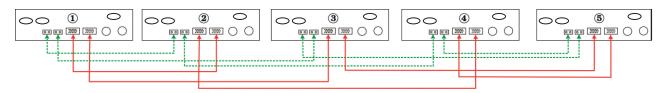


Six inverters in parallel:

Power Connection

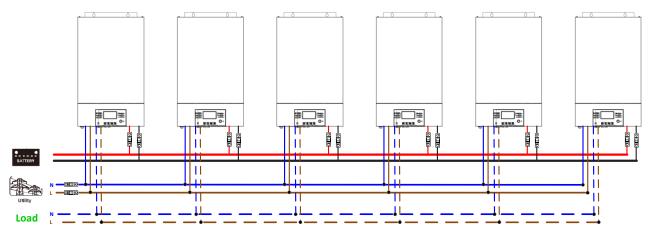


Communication Connection

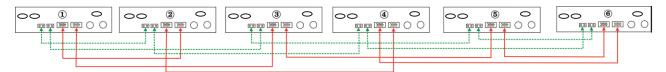


Seven inverters in parallel:



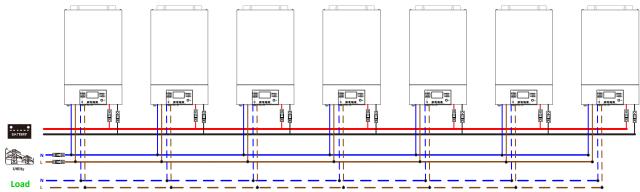

Communication Connection

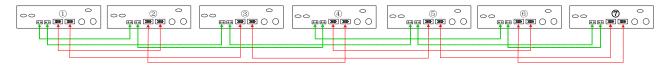



Eight inverters in parallel:

Power Connection




Communication Connection




Nine inverters in parallel:

Power Connection

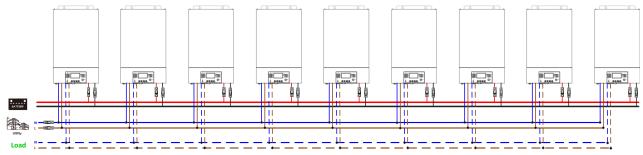


Communication Connection

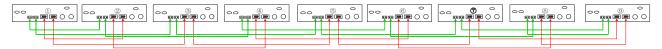


5-2. Support 3-phase equipment

Three inverters in each phase:

Power Connection

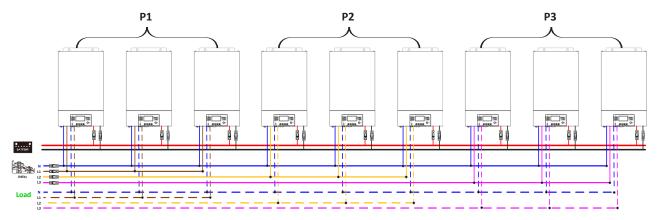




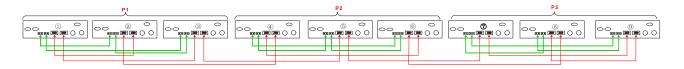


WARNING: Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

Two inverters in each phase:

Power Connection

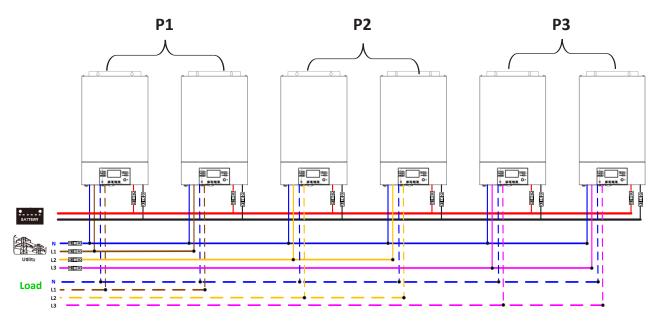


Communication Connection

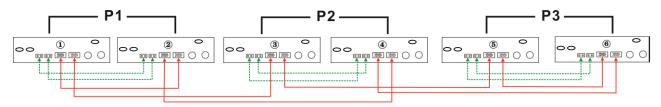




Power Connection

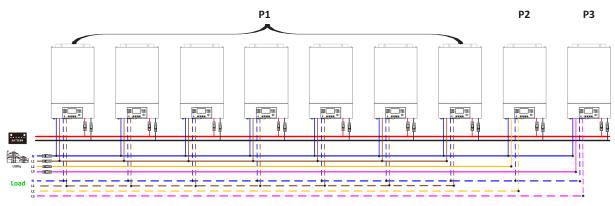

Note: It's up to customer's demand to pick 7 inverters on any phase.


P1: L1-phase, P2: L2-phase, P3: L3-phase.

Communication Connection

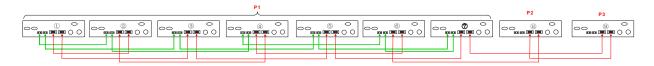


Note: If there is only one unit in one phase, this unit doesn't need to connect the current sharing cable.


Or you connect it like as below:

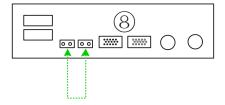

Four inverters in one phase and one inverter for the other two phases:


Power Connection

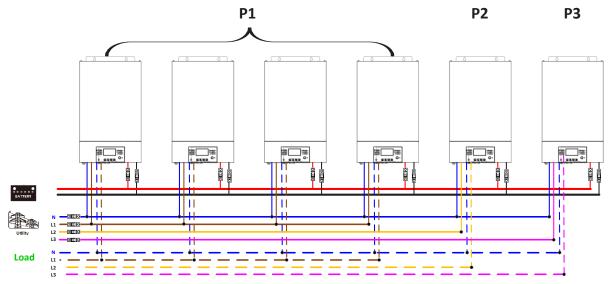

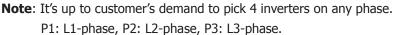





Communication Connection

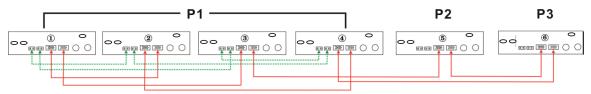

Three inverters in one phase, two inverters in second phase and one inverter for the third phase: **Power Connection**

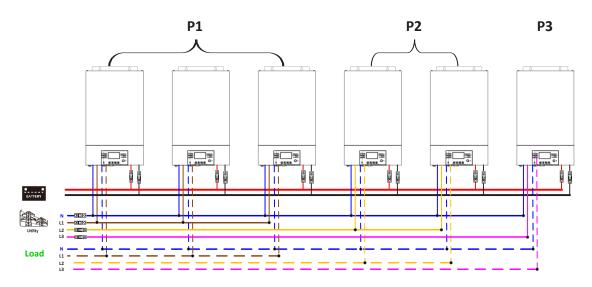


Communication Connection

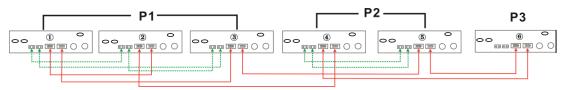


Three inverters in one phase and only one inverter for the remaining two phases:

Power Connection

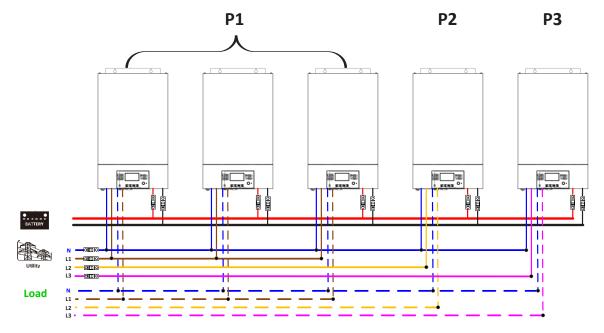


Communication Connection



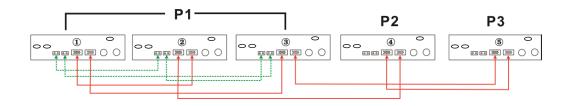


Two inverters in two phases and only one inverter for the remaining phase:

Power Connection

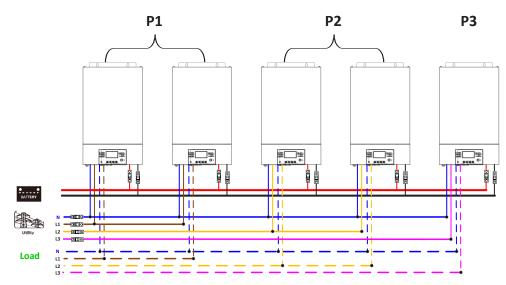


Communication Connection

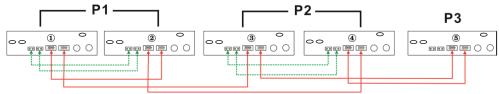


Two inverters in one phase and only one inverter for the remaining phases:

Power Connection

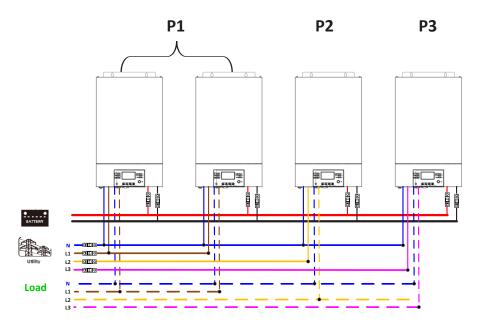


Communication Connection



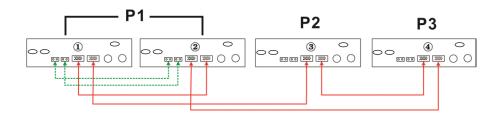


One inverter in each phase:

Power Connection

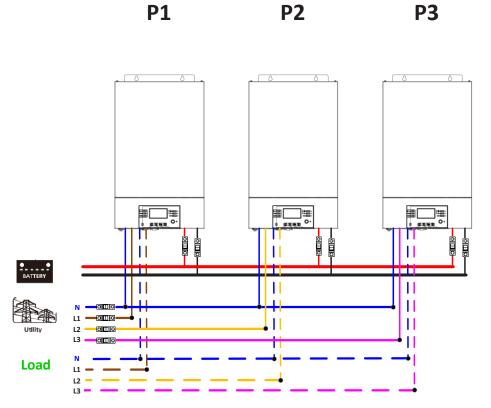

Communication Connection

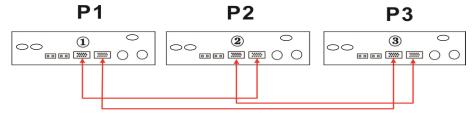

WARNING: Do not connect the current sharing cable between the inverters which are in different phases. Otherwise, it may damage the inverters.

6. PV Connection

Please refer to user manual of single unit for PV Connection.

CAUTION: Each inverter should connect to PV modules separately.



7. LCD Setting and Display

Setting Program:

Program	Description	Selectable option	n
		Single	When the unit is operated alone, please select "SIG" in program 28.
		SLG	
		Parallel	When the units are used in parallel for single phase application, please select "PAL" in program 28. Please refer to 5-1 for detailed
	AC output mode *This setting is able to set up only when the inverter is in standby mode. Be sure that on/off switch is in "OFF" status.	PAL	information.
28		L1 phase:	When the units are operated in 3-phase application, please choose "3PX" to define each inverter.
		38 (It is required to have at least 3 inverters or maximum 9 inverters to support three-phase equipment. It's required to have at least one inverter in each phase or it's up to four
		L2 phase:	inverters in one phase. Please refers to 5-2 for detailed information. Please select "3P1" in program 28 for the inverters connected to L1 phase, "3P2" in
		365	program 28 for the inverters connected to L2 phase and "3P3" in program 28 for the inverters connected to L3 phase.
		L3 phase:	Be sure to connect share current cable to units which are on the same phase.
		383	Do NOT connect share current cable between units on different phases.

Fault code display:

Fault Code	Fault Event	Icon on
60	Power feedback protection	F68
71	Firmware version inconsistent	
72	Current sharing fault	16.15
80	CAN fault	F80
81	Host loss	F81
82	Synchronization loss	F82
83	Battery voltage detected different	F83
84	AC input voltage and frequency detected different	F84
85	AC output current unbalance	1685
86	AC output mode setting is different	IF86




8. Commissioning

Parallel in single phase

Step 1: Check the following requirements before commissioning:


- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.

Step 2: Turn on each unit and set "PAL" in LCD setting program 28 of each unit. And then shut down all units. **NOET:** It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

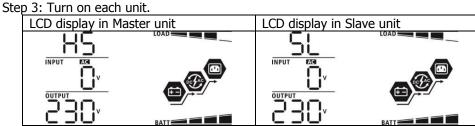

NOTE: Master and slave units are randomly defined.

Step 4: Switch on all AC breakers of Line wires in AC input. It's better to have all inverters connect to utility at the same time. If detecting AC connection, they will work normally.

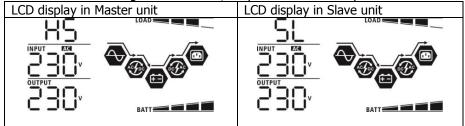

Step 5: If there is no more fault alarm, the parallel system is completely installed.

Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Support three-phase equipment


Step 1: Check the following requirements before commissioning:

- Correct wire connection
- Ensure all breakers in Line wires of load side are open and each Neutral wires of each unit are connected together.


Step 2: Turn on all units and configure LCD program 28 as P1, P2 and P3 sequentially. And then shut down all units.

NOET: It's necessary to turn off switch when setting LCD program. Otherwise, the setting can not be programmed.

Step 3: Turn on all units sequentially.

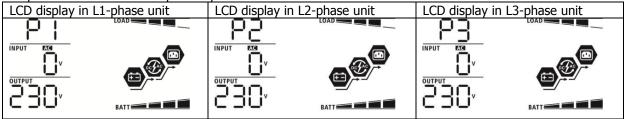

Step 4: Switch on all AC breakers of Line wires in AC input. If AC connection is detected and three phases are matched with unit setting, they will work normally. Otherwise, the AC icon will flash and they will not work

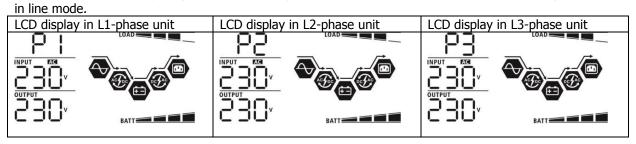

Step 5: If there is no more fault alarm, the system to support 3-phase equipment is completely installed.



Step 6: Please switch on all breakers of Line wires in load side. This system will start to provide power to the load.

Note 1: To avoid overload occurring, before turning on breakers in load side, it's better to have whole system in operation first.

Note 2: Transfer time for this operation exists. Power interruption may happen to critical devices, which cannot bear transfer time.

Situation				
Fault Code	Fault Event Description	Solution		
60	Current feedback into the inverter is detected.	 Restart the inverter. Check if L/N cables are not connected reversely in all inverters. For parallel system in single phase, make sure the sharing are connected in all inverters. For supporting three-phase system, make sure the sharing cables are connected in the inverters in the same phase, and disconnected in the inverters in different phases. If the problem remains, please contact your installer. 		
71	The firmware version of each inverter is not the same.	 Update all inverter firmware to the same version. Check the version of each inverter via LCD setting and make sure the CPU versions are same. If not, please contact your instraller to provide the firmware to update. After updating, if the problem still remains, please contact your installer. 		
72	The output current of each inverter is different.	 Check if sharing cables are connected well and restart the inverter. If the problem remains, please contact your installer. 		
80	CAN data loss	1. Check if communication cables are connected well and restart the		
81	Host data loss	inverter.		
82	Synchronization data loss	2. If the problem remains, please contact your installer.		
83	The battery voltage of each inverter is not the same.	 Make sure all inverters share same groups of batteries together. Remove all loads and disconnect AC input and PV input. Then, check battery voltage of all inverters. If the values from all inverters are close, please check if all battery cables are the same length and same material type. Otherwise, please contact your installer to provide SOP to calibrate battery voltage of each inverter. If the problem still remains, please contact your installer. 		
84	AC input voltage and frequency are detected different.	 Check the utility wiring conncetion and restart the inverter. Make sure utility starts up at same time. If there are breakers installed between utility and inverters, please be sure all breakers can be turned on AC input at same time. If the problem remains, please contact your installer. 		
85	AC output current unbalance	 Restart the inverter. Remove some excessive loads and re-check load information from LCD of inverters. If the values are different, please check if AC input and output cables are in the same length and material type. If the problem remains, please contact your installer. 		
86	AC output mode setting is different.	 Switch off the inverter and check LCD setting #28. For parallel system in single phase, make sure no 3P1, 3P2 or 3P3 is set on #28. For upporting three-phase system, make sure no "PAL" is set on #28. If the problem remains, please contact your installer. 		

9. Trouble shooting



Appendix A: Approximate Back-up Time Table

Model	Load (VA)	Backup Time @24Vdc 200Ah (min)	Backup Time @24Vdc 400Ah (min)	
	300	898	2200	
	600	444	1050	
	900	249	606	
	1200	190	454	
21/11/	1500	136	328	
3KW	1800	112	252	
	2100	96	216	
	2400	70	188	
	2700	62	148	
	3000	56	134	

Model	Load (VA)	Backup Time @ 48Vdc 200Ah (min) Backup Time @ 48Vdc 400Ah (min)			
	500	1226	2576		
	1000	536	1226		
5KW	1500	316	804		
	2000	222	542		
	2500	180	430		
	3000	152	364		
	3500	130	282		
	4000	100	224		
	4500	88	200		
	5000	80	180		

Note: Backup time depends on the quality of the battery, age of battery and type of battery.

Specifications of batteries may vary depending on different manufacturers.



Appendix B: BMS Communication Installation


1. Introduction

If connecting to lithium battery, it is recommended to purchase a custom-made RJ45 communication cable. Please check with your dealer or integrator for details.

This custom-made RJ45 communication cable delivers information and signal between lithium battery and the inverter. These information are listed below:

- Re-configure charging voltage, charging current and battery discharge cut-off voltage according to the lithium battery parameters.
- Have the inverter start or stop charging according to the status of lithium battery.

2. Lithium Battery Communication Configuration PYLONTECH

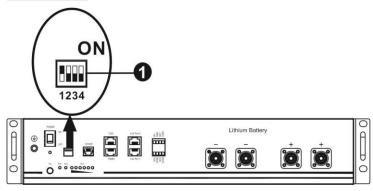

• ADD Switch: There are 4 ADD switches are to define different baud rate and battery group address. If switch position is turned to bottom for "OFF" position, it means "0". If switch position is turned to upper for "ON" position, it means "1".

Dip 1 is "ON" to represent the baud rate 9600.

Dip 2, 3 and 4 are to set up battery group address.

Dip switch 2, 3 and 4 on master battery (first battery) are to set up or change the group address.

Dip 1	Dip 2	Dip 3	Dip 4	Group address
	0	0	0	Single group only. It's required to set up master battery with this setting and slave batteries are unrestricted.
	1	0	0	Multiple group condition. It's required to set up master battery on the first group with this setting and slave batteries are unrestricted.
1: RS485 baud rate=9600	0	1	0	Multiple group condition. It's required to set up master battery on the second group with this setting and slave batteries are unrestricted.
Restart to take	1	1	0	Multiple group condition. It's required to set up master battery on the third group with this setting and slave batteries are unrestricted.
effect.	0	0	1	Multiple group condition. It's required to set up master battery on the fourth group with this setting and slave batteries are unrestricted.
	1	0	1	Multiple group condition. It's required to set up master battery on the fifth group with this setting and slave batteries are unrestricted.


NOTE: "1" is upper position and "0" is bottom position.

NOTE: The maximum groups of lithium battery is 5 and for maximum number for each group, please check with battery manufacturer.



3. Installation and Operation


After configuration, please install LCD panel with inverter and Lithium battery with the following steps. Step 1. Use custom-made RJ45 cable to connect inverter and Lithium battery.

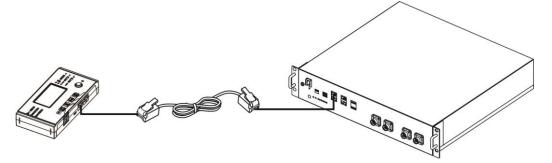


Please take notice for parallel system:

- 1. Only support common battery installation.
- Use one custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set battery type of this inverter to "PYL" in LCD program 5. The remaining inverters are set as "USE".

Step 2. Switch on Lithium battery.

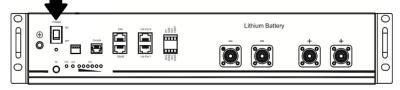

Step 3. Press more than three seconds to start Lithium battery. Output power is ready.

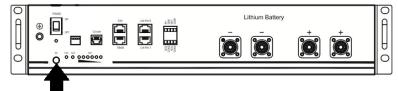

Step 4. Turn on the inverter.



Step 5. Be sure to select battery type as "PYL" in LCD program 5.

PYL

If communication between the inverter and battery is successful, the battery icon flash. Generally speaking, it will take longer than 1 minute to establish communication.




on LCD display will



WECO


Step 1. Use a custom-made RJ45 cable to connect inverter and Lithium battery.

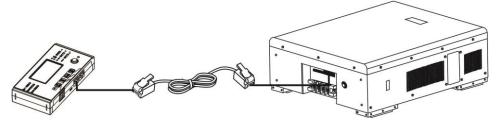

Please take notice for parallel system:

- 3. Only support common battery installation.
- 4. Use one custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set battery type of this inverter to "WEC" in LCD program 5. The remaining inverters are set as "USE".

Step 2. Switch on Lithium battery.

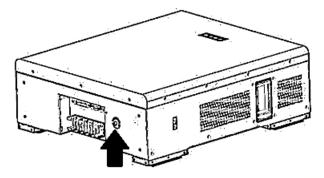

Step 3. Turn on the inverter.



Step 4. Be sure to select battery type as "WEC" in LCD program 5.

05 @

J3u



on LCD display will


If communication between the inverter and battery is successful, the battery icon

"flash". Generally speaking, it will take longer than 1 minute to establish communication.



SOLTARO


Step 1. Use a custom-made RJ45 cable to connect inverter and Lithium battery.

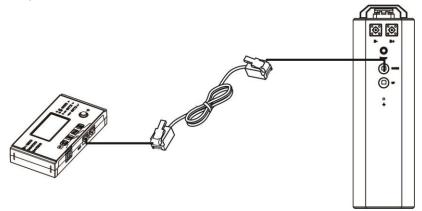

Please take notice for parallel system:

- 1. Only support common battery installation.
- 2. Use one custom-made RJ45 cable to connect any inverter (no need to connect to a specific inverter) and Lithium battery. Simply set battery type of this inverter to "SOL" in LCD program 5. The remaining inverters are set as "USE".

Step 2. Open DC isolator and switch on Lithium battery.

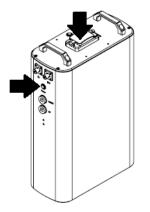

Step 3. Turn on the inverter.



Step 4. Be sure to select battery type as "SOL" in LCD program 5.

05 🛛

SOL

If communication between the inverter and battery is successful, the battery icon

"flash". Generally speaking, it will take longer than 1 minute to establish communication.



on LCD display will



4. LCD Display Information

Press "UP" or "DOWN" key to switch LCD display information. It will show battery pack and battery group number before "Main CPU version checking" as below screen.

Selectable information	LCD display
Battery pack numbers & Battery	Battery pack numbers = 3, battery group numbers = 1
group numbers	

5. Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

Code	Description	Action
60 @	If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.	
5 Iø	 Communication lost (only available when the battery type is setting as "Pylontech Battery".) After battery is connected, communication signal is not detected for 3 minutes, buzzer will beep. After 10 minutes, inverter will stop charging and discharging to lithium battery. Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately. 	
59 @	If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.	
70@	If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.	
	If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharging battery.	



Appendix C: The Wi-Fi Operation Guide in Remote Panel

1. Introduction

Wi-Fi module can enable wireless communication between off-grid inverters and monitoring platform. Users have complete and remote monitoring and controlling experience for inverters when combining Wi-Fi module with WatchPower APP, available for both iOS and Android based device. All data loggers and parameters are saved in iCloud.

The major functions of this APP:

- Delivers device status during normal operation.
- Allows to configure device setting after installation.
- Notifies users when a warning or alarm occurs.
- Allows users to query inverter history data.



2. WatchPower App

2-1. Download and install APP

Operating system requirement for your smart phone:

Android system supports Android 5.0 and above

Please scan the following QR code with your smart phone and download WatchPower App.



Android

iOS system

system

Or you may find "WatchPower" app from the Apple® Store or "WatchPower Wi-Fi" in Google® Play Store.

2-2. Initial Setup

Step 1: Registration at first time

After the installation, please tap the shortcut icon it to access this APP on your mobile screen. In the screen, tap "Register" to access "User Registration" page. Fill in all required information and scan the remote box PN by

tapping 📛 icon. Or you can simply enter PN directly. Then, tap "Register" button.




V 1.0.0	.nt ♥ T42:18 +7 98% ✓ Register
lease enter user name	
	Please enter user name
lease enter the password	Please enter the password
Remember Me	Please enter the password
Login	Please enter email
	Please enter the phone number
Wi-Fi Config	Please enter the Wi-Fi Module PN

Then, a "Registration success" window will pop up. Tap "Go now" to continue setting local Wi-Fi network connection.




Step 2: Local Wi-Fi Module Configuration

Now, you are in "Wi-Fi Config" page. There are detailed setup procedure listed in "How to connect?" section and you may follow it to connect Wi-Fi.

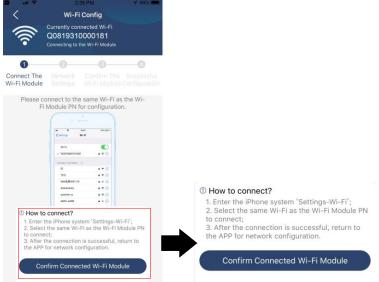

Enter the "Settings→Wi-Fi" and select connected Wi-Fi name. The connected Wi-Fi name is the same to your Wi-Fi PN number and enter default password "12345678".

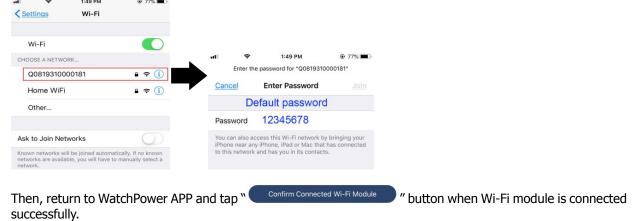


marel[®]Tech

Step 3: Wi-Fi Network settings



Step 4: Tap "Confirm" to complete the Wi-Fi configuration between the Wi-Fi module and the Internet.

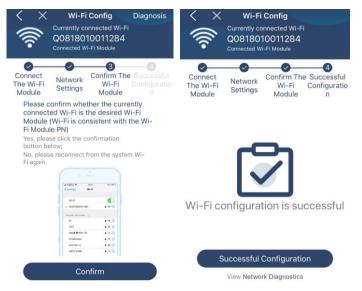

If the connection fails, please repeat Step 2 and 3.



Diagnose Function

If the module is not monitoring properly, please tap "Diagnosis" on the top right corner of the screen for further details. It will show repair suggestion. Please follow it to fix the problem. Then, repeat the steps in the chapter 4.2 to re-set network setting. After all setting, tap "Rediagnosis" to re-connect again.



atl 🗢 5:51 PM @ 95% 💼	📶 🗢 5:51 PM	95%
Network diagnostics	Network diagnostics	3
Inverter Datalogger Router Server	Inverter Datalogger Router	Server
Repair suggestion Rediagnosis	Repair suggestion	ediagnosis
The Inverter and the datalogger communicate abnormally.		
 Please check if the Inverter and the datalogger are powered on normally. 		
 Please check if the Inverter address is between 1 and 5. 	The diagnosis is succes	sful!
 Please check if the connection between the Inverter and the collector is abnormal, such as poor contact caused by oxidation or looseness of the interface, reverse connection of the 485 interface AB line, and data line damage. 		
 Try restarting the Inverter and datalogger to see if the anomaly is eliminated. 		
Datalogger and router communication abnormalities		
 Please confirm that the wireless routing network setting has been made. 		
Make sure that the datalogger is set up to connect to AP hotspots sent by hardware devices such as wireless routers instead of virtual AP hotspots.		

2-3. Login and APP Main Function

After finishing the registration and local Wi-Fi configuration, enter registered name and password to login. Note: Tick "Remember Me" for your login convenience afterwards.



Overview

After login is successfully, you can access "Overview" page to have overview of your monitoring devices, including overall operation situation and Energy information for Current power and Today power as below diagram.

Carrier 🗢	6:10 PM	٨		-
	Overvi	ew		
Devices	Offline			
1	Alarm			
-				
Energy				
Current Power:0.1k	W Tor	day Power: <mark>0</mark> .	0kWh	
409 0.15				
0.12				
0.05				
0.06				
0.00				
0.00				
2 4 6	e 10 12	14 10 10	20 22	24. .H
	·····		8	
Overview	Devices		Mo	




Devices

Tap the 🗮 icon (located on the bottom) to enter Device List page. You can review all devices here by adding or deleting Wi-Fi Module in this page.

Add device			Delete device		
Carrier 🗢 6:10 PM Device List		\oplus		^{о2 РМ} ice List	 € 64% ■
Q Please enter the alias or sn of	device		Q Please enter the a	lias or SN of c	levice
All status \checkmark	Alias A-Z \checkmark		All status 🗸	Alias	<u>A-Z</u> ~
92931706103012 Device SN:92931706103012 Wi-Fi Module PN:Q081931007	14063	>	 10031706103300 Device SN:10031706103300 Datalogger PN:Q081931000 		> <u>Delete</u>
			100317061 Device SN:1003' Datalogger PN:C	1706103300	>
	8				8
Overview Devices	Me		Overview D	evices	Me

Tap 1 icon on the top right corner and manually enter part number to add device. This part number label is pasted on the bottom of remote LCD panel. After entering part number, tap "Confirm" to add this device in the Device list.

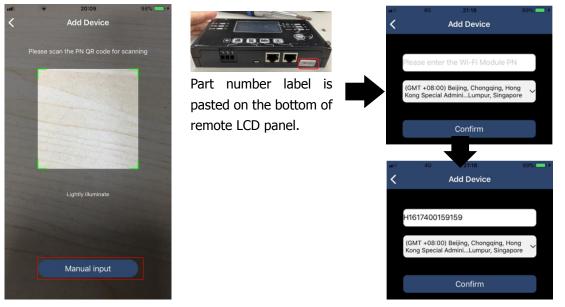

For more information about Device List, please refer to the section 2.4.

ME

In ME page, users can modify "My information", including [User's Photo], [Account security], [Modify password], [Clear cache], and [Log-out], shown as below diagrams.



				<	Account Security
arrier 🗢	7:04 PM		Modify Password		word >
	Ме			Carrier 🗢	7:04 PM Modify Password
		Cloud Walker Set the WatchPower password, you can login di WatchPower with your account			
		Owner		My account	Cloud Walker
1 Devices		0 Alarms		Old password	Please enter the old password
Account Security	1	>		New password	Please enter the new password
About		>		Confirm passy	vord Enter new password again
Clear Cache		1.62KB			
	Log Out				Confirm

2-4. Device List

In Device List page, you can pull down to refresh the device information and then tap any device you want to check up for its real-time status and related information as well as to change parameter settings. Please refer to the parameter setting list.

	♥ 2:15 Device		 70% ■) ⊕ 	all 🗢	2:05 PM Device List	€ 70	÷	ali ♥ 8:25 PM < 10031706103300	● 62% ■)
QF	Please enter the alia	s or SN of de	vice	Q Please ent	ter the alias or S	N of device		Battery Mode	229.5V
	All status \checkmark	Alias A	<u>-z</u> ~	All status	i ~	<u>Alias A-Z</u> ∽		DVVIATER	
	Pull down t Last updated:	Today 14:15		Device	31706103300 SN:100317061033 gger PN:Q0819310		>		26.2V
bi th	Device SN:1003170 Datalogger PN:Q08	6103300	>					Basic Information	product Info
	Datalogger PN:QUC	19310000181						Grid Voltage	0.0V
								Grid Frequency	0.0Hz
								PV Input Voltage	0.0V
								Battery Voltage	26.2V
								Battery Capacity	100%
								Battery Charging Current	0A
								Battery Discharge Current	OA
								AC Output Voltage	229.5V
c	Dverview Devic		(A) Me	Overview	Devices	8 Me		AC Output Frequency	60.0Hz

Device Mode

On the top of screen, there is a dynamic power flow chart to show live operation. It contains five icons to present PV power, inverter, load, utility and battery. Based on your inverter model status, there will be [Standby Mode], [Line Mode], [Battery Mode].

[Standby Mode] Inverter will not power the load until "ON" switch is pressed. Qualified utility or PV source can charge battery in standby mode.



[Line Mode] Inverter will power the load from the utility with or without PV charging. Qualified utility or PV source can charge battery.






[Battery Mode] Inverter will power the load from the batter with or without PV charging. Only PV source can charge battery.




Device Alarm and Name Modification

In this page, tap the 🙆 icon on the top right corner to enter the device alarm page. Then, you can review alarm history and detailed information. Tap the 🖾 icon on the top right corner, a blank input box will pop out. Then, you can edit the name for your device and tap "Confirm" to complete name modification.

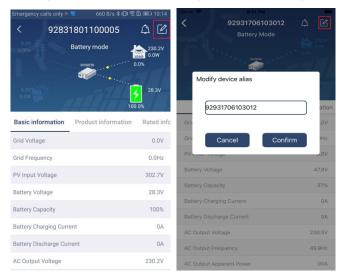

Device Information Data

Users can check up [Basic Information], [Product Information], [Rated information], [History], and [Wi-Fi Module Information] by swiping left.

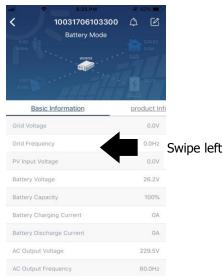

[Basic Information] displays basic information of the inverter, including AC voltage, AC frequency, PV input voltage, Battery voltage, Battery capacity, Charging current, Output voltage, Output frequency, Output apparent power, Output active power and Load percent. Please slide up to see more basic information.

[Production Information] displays Model type (Inverter type), Main CPU version, Wi-Fi CPU version and secondary CPU version.



[Rated Information] displays information of Nominal AC voltage, Nominal AC current, Rated battery voltage, Nominal output voltage, Nominal output frequency, Nominal output current, Nominal output apparent power and Nominal output active power. Please slide up to see more rated information.

[History] displays the record of unit information and setting timely.

[Wi-Fi Module Information] displays of Wi-Fi Module PN, status and firmware version.

Parameter Setting

This page is to activate some features and set up parameters for inverters. Please be noted that the listing in "Parameter Setting" page in below diagram may differ from the models of monitored inverter. Here will briefly highlight some of it, [Output Setting], [Battery Parameter Setting], [Enable/ Disable items], [Restore to the defaults] to illustrate.

Carrier 🗢	6:55 PM	-
	92931706103012 Battery Mode	
y	Parameter Setting	Wi-Fi Mod
Output Setti	ng	>
Battery Para	meter Setting	>
Enable/Disat	ble items	>
Restore to th	ne defaults	>
Time zone s	etting	>
Wi-Fi Module	e configuration	>

There are three ways to modify setting and they vary according to each parameter. a) Listing options to change values by tapping one of it.

b) Activate/Shut down functions by clicking "Enable" or "Disable" button.

c) Changing values by clicking arrows or entering the numbers directly in the column. Each function setting is saved by clicking "Set" button.

Please refer to below parameter setting list for an overall description and be noted that the available parameters may vary depending on different models. Please always see the original product manual for detailed setting instructions.

Item		Description			
Output setting	Output source	To configure load power source priority.			
	priority				
	AC input range	When selecting "UPS", it's allowed to connect personal computer.			
		Please check product manual for details.			
		When selecting "Appliance", it's allowed to connect home appliances.			
	Output voltage	To set output voltage.			
	Output frequency	To set output frequency.			
Battery	Battery type:	To set connected battery type.			
parameter	Battery cut-off	To set the battery stop discharging voltage.			
setting	voltage	Please see product manual for the recommended voltage range based			
		on connected battery type.			
	Back to grid	When "SBU" or "SOL" is set as output source priority and battery			
	voltage	voltage is lower than this setting voltage, unit will transfer to line mode			
		and the grid will provide power to load.			
	Back to discharge	When "SBU" or "SOL" is set as output source priority and battery			
	voltage	voltage is higher than this setting voltage, battery will be allowed to			

Parameter setting list:



		discharge.				
	Charger source	To configure charger source priority.				
	priority:					
	Max. charging					
	current					
	Max. AC charging	It's to set up battery charging parameters. The selectable values in different inverter model may vary. Please see product manual for the details.				
	current:					
	Float charging					
	voltage					
	Bulk charging	It's to set up battery charging parameters. The selectable values in				
	voltage	different inverter model may vary. Please see product manual for the details.				
	Battery	Enable or disable battery equalization function.				
	equalization					
	Real-time	It's real-time action to activate battery equalization.				
	Activate Battery					
	Equalization					
	Equalized Time	To set up the duration time for battery equalization.				
	Out					
	Equalized Time	To set up the extended time to continue battery equalization.				
	Equalization	To set up the frequency for battery equalization.				
	Period					
	Equalization	To set up the battery equalization voltage.				
	Voltage					
Enable/Disable	LCD Auto-return	If enable, LCD screen will return to its main screen after one minute				
Functions	to Main screen	automatically.				
	Fault Code	If enabled, fault code will be recorded in the inverter when any fault				
	Record	happens.				
	Backlight	If disabled, LCD backlight will be off when panel button is not operated				
		for 1 minute.				
	Bypass Function	If enabled, unit will transfer to line mode when overload happened in				
		battery mode.				
	Beeps while	If enabled, buzzer will alarm when primary source is abnormal.				
	primary source					
	interrupt					
	Over	If disabled, the unit won't be restarted after over-temperature fault is				
	Temperature	solved.				
	Auto Restart					
	Overload Auto	If disabled, the unit won't be restarted after overload occurs.				
	Restart					
	Buzzer	If disabled, buzzer won't be on when alarm/fault occurred.				
Restore to the	This function is to restore all settings back to default settings.					
default						

